

# Panasonic

Model No.  
TH-39A400X TH-42A410G  
TH-42A400G TH-42A410K  
TH-42A400K TH-42A410M  
TH-42A400X TH-42A410X  
TH-42A408K  
TH-42A409K

## Operating Instructions LED TV

### Contents

Safety Precautions	2
Setting Up the TV	3
Connecting the TV	4
Initial Setup	6
Operating the TV	6
Watching External Inputs	7
Using the Media Player	8
Using the Menu Functions	9
Additional Information	12
Troubleshooting	13
Specifications	14
Maintenance	15
Licence	15

### English

Thank you for purchasing this Panasonic product. Please read these instructions carefully before operating this product and retain them for future reference.

The images shown in this manual are for illustrative purposes only. Some illustrations are presented as conceptual images and may be different from the actual products. Illustrations shown may be different between models and countries.

The illustrations for 42A400 series is used in this manual unless otherwise mentioned.

Transport only in upright position



## Safety Precautions

To help avoid risk of electrical shock, fire, damage or injury, please follow the warnings and cautions below:

### Mains plug and lead

#### Warning

If you detect anything unusual, immediately remove the mains plug.

- Mains plug types vary between countries.

• This TV is designed to operate on AC 220 - 240 V, 50/60 Hz.

- Insert the mains plug fully into the socket outlet.
- Ensure that the mains plug is easily accessible.
- Disconnect the mains plug when cleaning the TV.
- Do not touch the mains plug with wet hands.

- Do not damage the mains lead.
- Do not place a heavy object on the lead.

- Do not place the lead near a high temperature object.

- Do not pull on the lead. Hold onto the mains plug body when disconnecting the plug.

- Do not move the TV with the lead plugged into a socket outlet.
- Do not twist the lead, bend it excessively or stretch it.
- Do not use a damaged mains plug or socket outlet.
- Ensure the TV does not crush the mains lead.

- Do not use any mains lead other than that provided with this TV.

### Take care

#### Warning

- Do not remove covers and never modify the TV yourself as live parts are accessible when they are removed. There are no user serviceable parts inside.

- Do not expose the TV to rain or excessive moisture. This TV must not be exposed to dripping or splashing water and objects filled with liquid, such as vases, must not be placed on top of or above the TV.

- Do not insert foreign objects into the TV through the air vents.

- Do not use an unapproved pedestal / mounting equipment. Be sure to ask your local Panasonic dealer to perform the setup or installation of approved wall-hanging brackets.

- Do not apply strong force or impact to the display panel.

- Do not place the TV on sloped or unstable surfaces, and ensure that the TV does not hang over the edge of the base.

- This TV is designed for table-top use.
- Do not expose the TV to direct sunlight and other sources of heat.

## To prevent the spread of fire, keep candles or other open flames away from this product at all times

### Dangerous part / Small object

#### Warning

- This product contains possibly dangerous parts such as plastic bags, that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

### Pedestal

#### Warning

- Do not disassemble or modify the pedestal.

#### Cautions

 
- Do not use any pedestal other than the one provided with this TV.
- Do not use the pedestal if it becomes warped or physically damaged. If this occurs, contact your nearest Panasonic dealer immediately.
- During setup, make sure that all screws are securely tightened.
- Ensure that the TV does not suffer any impact during installation of the pedestal.
- Ensure that children do not climb onto the pedestal.
- Install or remove the TV from the pedestal with at least two people.
- Install or remove the TV by the specified procedure.

### Ventilation

#### Cautions

Allow sufficient space around the TV in order to help prevent excessive heat, which could lead to early failure of some electronic components.

Minimum distance (cm)



- Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, tablecloths and curtains.

- Whether you are using a pedestal or not, always ensure the vents at the bottom of the TV are not blocked and there is sufficient space to enable adequate ventilation.

### Moving the TV

#### Cautions

- Before moving the TV, disconnect all cables.
- Move the TV with at least two people. Support as shown to avoid injury by the TV tipping or falling.

### When not in use for a long time

#### Cautions

This TV will still consume some power even in the Off mode, as long as the mains plug is still connected to a live socket outlet.

- Remove the mains plug from the wall socket when the TV is not in use for a prolonged period of time.

### Use conditions

#### Cautions

- This appliance is intended for use in tropical climates.

### Battery for the Remote Control

#### Cautions

- Incorrect installation may cause battery leakage, corrosion and explosion.
- Replace only with the same or equivalent type.
- Do not mix old and new batteries.
- Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable batteries (Ni-Cd, etc.).
- Do not burn or break up batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like.
- Make sure you dispose of batteries correctly.

## Setting Up the TV

### Standard accessories

Accessories may not be placed all together. Take care not to throw them away unintentionally.

### Remote Control

- N2QAYB000823

### Batteries (R6) × 2

(p. 4)

### Main Lead (p. 5)

- Other series

- A410M series

### Pedestal

- Assembly screws

- A (M5 × 15) × 4


- B (M4 × 12) × 4

- Bracket


- Base

### Attaching the pedestal

#### 1 Assemble the pedestal

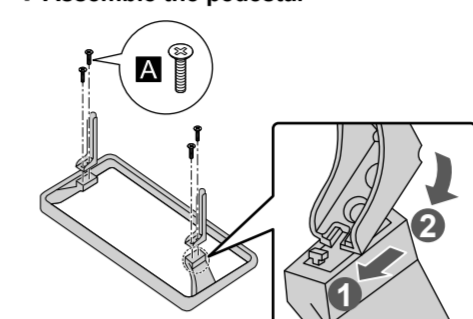

#### 2 Attach the TV to the pedestal

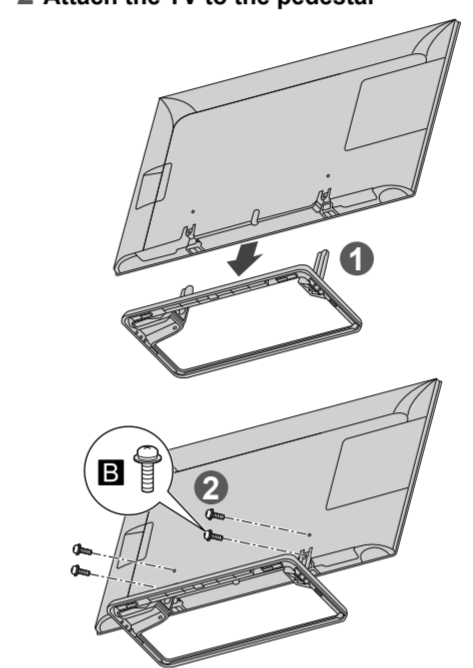


### Removing the pedestal from the TV

Be sure to remove the pedestal in the following way when using the wall-hanging bracket or repacking the TV.

- 1 Remove the assembly screws **B** from the TV.
- 2 Pull out the pedestal from the TV.
- 3 Remove the assembly screws **A** from the bracket.


### Inserting remote's batteries

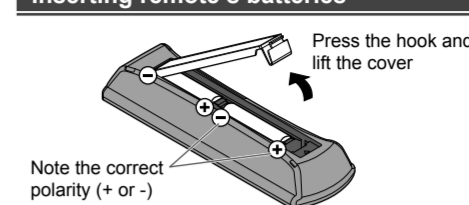

### Optional accessories

#### Wall-hanging bracket (not supplied)

Please contact your local Panasonic dealer to purchase the recommended optional accessories.

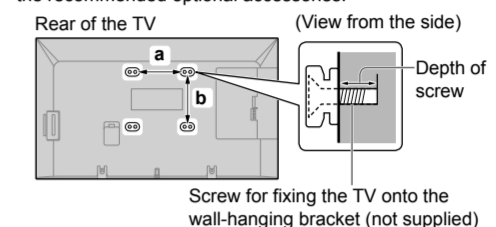

### Holes for wall-hanging bracket installation

a: 200 mm

b: 200 mm

### Screw specification

Model	Type	Depth of screw	
		Minimum	Maximum
39-inch	M6	11 mm	27 mm
42-inch	M6	10 mm	19 mm


#### Warning

- When optional accessories such as wall brackets etc. are used, always read and follow the manufactures installation and usage instructions.
- Do not mount the unit directly below ceiling lights (such as spotlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.
- When installing wall brackets you must ensure the wall bracket is not electrically grounded to metal wall studs. Always ensure that there are no electrical cables, pipes etc. in the wall before you begin the wall bracket installation.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

## Connecting the TV

- External equipment and cables shown are not supplied with this TV.
- Ensure that the unit is disconnected from the mains socket before attaching or disconnecting any leads.
- Check the type of terminals and cable plugs are correct when connecting.
- When using an HDMI cable, use the fully wired one.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor. Otherwise, distortion of image / sound may occur or operation of other equipment may be interfered.
- Also read the manual of the equipment being connected.

### Terminals

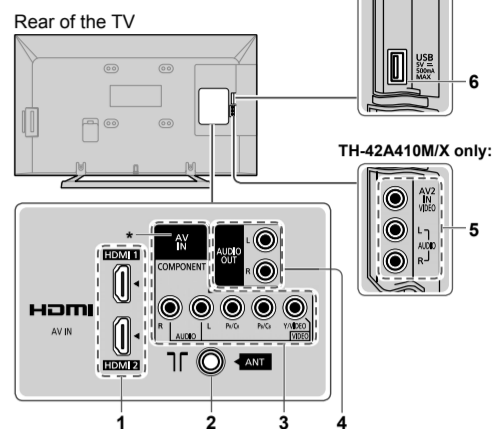

- 1 HDMI 1 - 2
- 2 Aerial terminal
- 3 TH-42A410M/X only: AV1 IN\*  
Other models: AV IN
- 4 AUDIO OUT
- 5 TH-42A410M/X only: AV2 IN
- 6 USB port

- When optional accessories such as wall brackets etc. are used, always read and follow the manufactures installation and usage instructions.
- Do not mount the unit directly below ceiling lights (such as spotlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.
- When installing wall brackets you must ensure the wall bracket is not electrically grounded to metal wall studs. Always ensure that there are no electrical cables, pipes etc. in the wall before you begin the wall bracket installation.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

Panasonic does not guarantee operation and performance of peripheral devices made by other manufacturers, and we disclaim any liability or damage arising from operation and/or performance from usage of such other maker's peripheral devices.


The recording and playback of content on this or any other device may require permission from the owner of the copyright or other such rights in that content. Panasonic has no authority to and does not grant you that permission and explicitly disclaims any right, ability or intention to obtain such permission on your behalf. It is your responsibility to ensure that your use of this or any other device complies with applicable copyright legislation in your country. Please refer to that legislation for more information on the relevant laws and regulations involved or contact the owner of the rights in the content you wish to record or playback.

Panasonic and its affiliates make no representations or warranties of any kind with respect to the USB devices and the performance of communication between the USB devices and the USB port of Panasonic products, and expressly disclaims any and all warranties, whether express or implied or otherwise, including without limitation any implied warranty of fitness for a particular purpose, any loss of data, and any implied warranties arising from course of dealing or course of performance of data communication between the USB devices and the USB port of Panasonic products.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

## Connections

### Aerial and mains lead

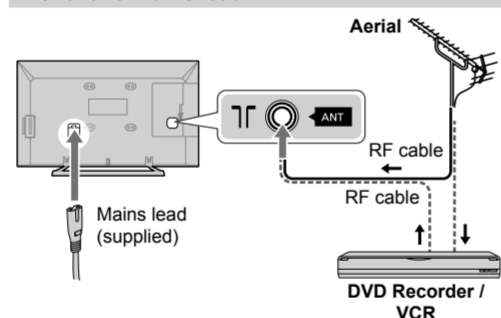


--- Alternative connection


#### Insert the mains plug firmly into place.

- When disconnecting the mains lead, be absolutely sure to disconnect the mains plug at the socket outlet first.


- Keep the space between the TV and RF cable to prevent distorted image.
- Do not put the RF cable close to the mains lead to avoid noise.
- Do not place the RF cable under the TV.
- An aerial, correct cable (75  $\Omega$  coaxial) and correct terminating plug are required to obtain optimum quality picture and sound.
- If a communal aerial system is used, you may require the correct connection cable and plug between the wall aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct aerial system for your particular area and the accessories required.
- Any matters regarding aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the customer.
- If the aerial is placed in the wrong location, interference might happen.

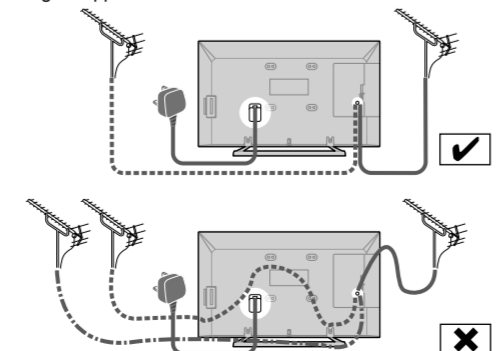

### Set top box

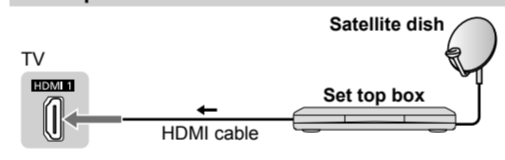


### AV / Game equipment

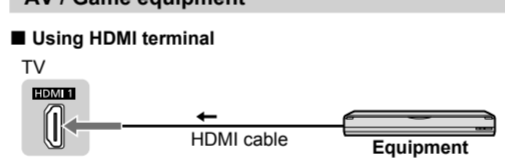


• You can also make similar connection via HDMI 2.

### Using COMPONENT terminals

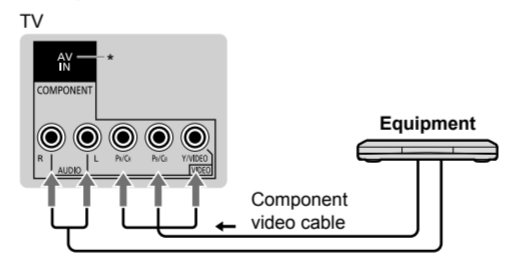

- TH-42A410M/X only: AV1 IN


### Using COMPOSITE terminals

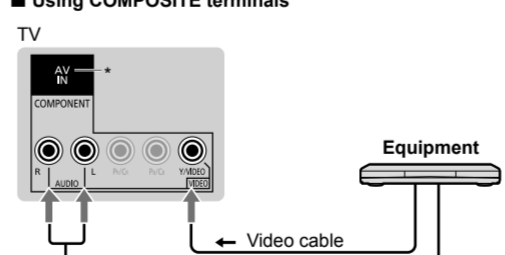

- TH-42A410M/X only: AV1 IN
- TH-42A410M/X only: AV2 IN

You can also make similar connection via AV2 IN.

### Speaker system

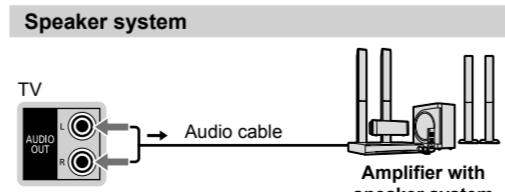


## Initial Setup

When you first turn on the TV, a series of steps will pop-up to guide you to set up your TV.

- These steps are not necessary if the setup has been completed by your local dealer.


### 1 Plug the mains plug into the socket outlet, then switch on the TV

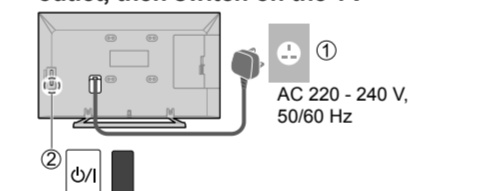

### 2 Select your language




### 3 Select your area

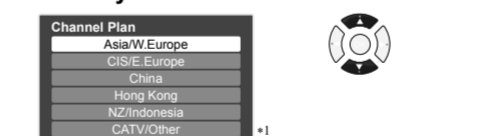


- When selecting [CATV/Other], press OK, and then select the Channel Plan from [Indian CATV], [South Africa], [American System], [American CATV] or [Japan].

### 4 Start Auto Tuning

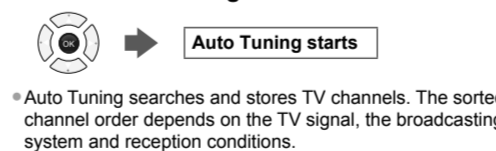

- Auto Tuning searches and stores TV channels. The sorted channel order depends on the TV signal, the broadcasting system and reception conditions.

### 5 Select [Home]

 


- To change the viewing environment later on, you need to initialise all settings by accessing [Shipping Condition] (p. 11).

Setup is now complete and your TV is ready for viewing.

## Operating the TV

### Using the remote control

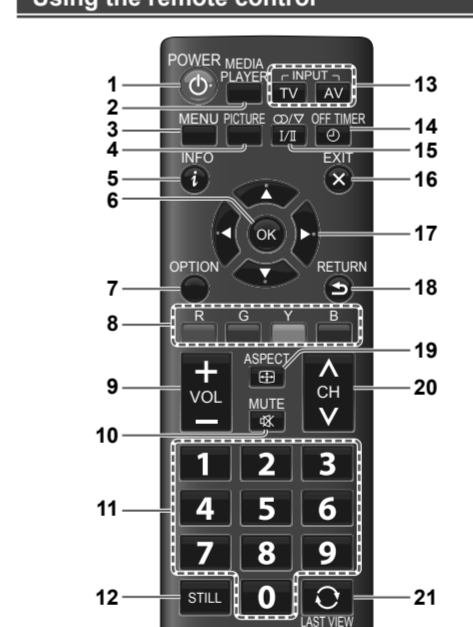

- 1 Switches the TV On / Standby
- 2 MEDIA PLAYER (p. 8)
- 3 Displays [Main Menu] (p. 9)
- 4 Selects picture mode (p. 9) [Viewing Mode] (p. 9)
  - Press repeatedly to select.
- 5 Displays information banner
- 6 OK
  - Confirms selections.
  - Press after selecting channel positions to quickly change channel.
- 7 Displays [Option Menu]
  - Shortcuts to some setting menus for picture, sound, etc.
  - Follow the operation guide to select / change the settings.
- 8 Coloured buttons
  - Performs multiple operations which correspond to the operation guide displayed on the menu screen.
- 9 Volume Up / Down
- 10 Sound Mute On / Off
- 11 Numeric buttons
  - Changes channel.
  - When in Standby mode, switches TV On.
- 12 Freezes / unfreezes picture

### 13 Input mode selection

- TV - switches to TV input mode
- AV - displays [Input Selection] screen (p. 7) or press repeatedly to select the AV input mode

### 14 OFF TIMER

- Press repeatedly to select the period after which the TV will turn to Standby mode automatically.

### 15 Changes multiplex sound mode (if available)

Sound mode indicator:  
○ : STEREO I : MAIN I  
▽ : MONO II : SUB II

### 16 Exits to the TV viewing screen

### 17 Cursor buttons

- Makes selections or adjustments.

### 18 Returns to the previous menu / page

### 19 ASPECT

- Displays the [Aspect Selection] screen. Follow the operation guide to select the mode.
- [16:9] / [14:9] / [Just] / [4:3] / [4:3 Full] / [Zoom1] / [Zoom2] / [Zoom3] (p. 12)
  - You can also press the button repeatedly to select the mode.

### 20 Channel Up / Down

### 21 Returns to the last viewed channel

### About operation guide

When operating the TV with the remote control, follow the operation guide available at the bottom of the screen to perform the operation you want.




Referring to the operation guide:

- To select the mode
- To change to the selected mode
- To return to the previous menu
- To exit the menu

- [USB] : Switches to Media Player (p. 8)
- You can label or skip each input mode (except [USB]).
- "Input Labels" (p. 11)

Skipped inputs will not be displayed when the AV button is pressed.


### Using the TV controls

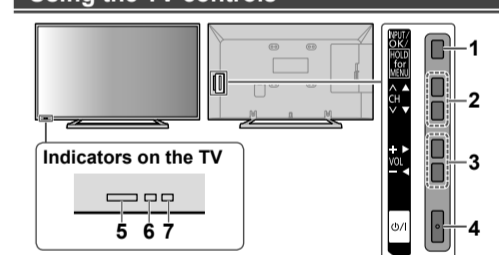

- 1 Displays [Input Selection] screen
  - On first press, the [Input Selection] screen for control panel is displayed. Pressing the button again will toggle cursor movement.
  - Displays [Main Menu] when press and hold for 3 seconds
  - Confirms selection (OK button) while in the menu system
- 2 Channel Up / Down
  - Makes selections or adjustments when in the menu system
- 3 Volume Up / Down
  - Makes selections or adjustments when in the menu system
- 4 Switches TV On or Standby
  - To completely turn Off the TV, remove the mains plug from the wall socket.
- 5 Remote control signal receiver
- 6 C.A.T.S. (Contrast Automatic Tracking System) sensor
  - Senses brightness to adjust picture quality when [Eco Mode] in the Picture Menu is set to [On].
  - (p. 10)
- 7 Power LED
  - Red: Standby
  - Green: On

## Watching External Inputs

Connect the external equipment (p. 5), then select the input corresponds to the connected terminal.

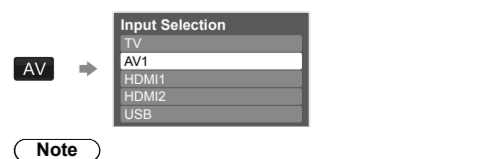

- [USB] : Switches to Media Player (p. 8)
- You can label or skip each input mode (except [USB]).
- "Input Labels" (p. 11)


Skipped inputs will not be displayed when the AV button is pressed.

## Using the Media Player

Media Player allows you to enjoy photo, music or video recorded on a USB Flash Memory.

- The picture may not appear correctly on this TV depending on the digital cameras used.
- Display may take some time when there are many files and folders in the USB Flash Memory.
- Partly degraded files might be displayed at a reduced resolution.
- The folder and file names may be different depending on the digital camera used.

### 1 Insert the USB Flash Memory

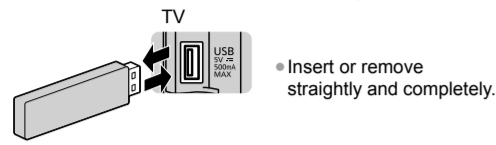

\* Insert or remove straightly and completely.

### 2 Start Media Player




- [Photo]:** Displays the thumbnail of all photos in the USB device.
- [Music]:** Displays the thumbnail of music folders in the USB device.
- [Movie]:** Displays the thumbnail of video titles in the USB device.

### [Contents Select]

When you are in the thumbnail view of any mode, you change to the other mode by returning to the [Contents Select] screen.

### Photo mode

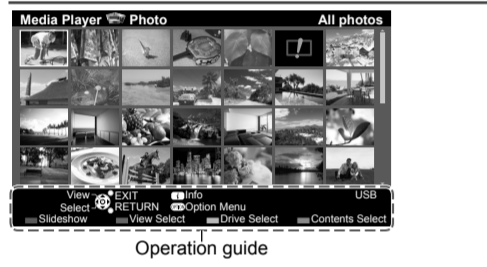

**[Option Menu]**  
Contains [Video Setup Menu] to set up Movie mode.

While in thumbnail view:  
**[Repeat]**  
Playback repeat within the title [Off] / [On]  
 - Only the selected folder will be repeated.

During movie playback:  
**[Multi Audio]**  
Selects the sound tracks (if available)  
**[Subtitle]**  
Selects the subtitle (if available)  
**[Off] / [Subtitle1] / [Subtitle2] ...)**

**[Aspect Change]**  
**[16:9] / [14:9] / [Just] / [4:3] / [4:3 Full] / [Zoom1] / [Zoom2] / [Zoom3]**  
 - You can also change the aspect using the **ASPECT** button.

## Additional Information

### Auto standby function

The TV will automatically go into Standby mode in the following conditions:

- No signal is received and no operation is performed for 30 minutes in Analogue TV mode.
- [Off Timer] is active in the Setup Menu.
- No operation is performed for the period selected in [Auto Standby] (p. 11).

### Aspect

- [16:9]**  
Directly displays the image at 16:9 without distortion (anamorphic).
- [14:9]**  
Displays the image at the standard 14:9 without distortion.
- [Just]**  
Displays a 4:3 image full-screen. Stretching is only noticeable at the left and right edges.
- [4:3]**  
Displays the image at the standard 4:3 without distortion.
- [4:3 Full]**  
Displays a 4:3 image enlarged horizontally to fit the screen. \* HD signal only
- [Zoom1]**  
Displays a 16:9 letterbox or 4:3 image without distortion.
- [Zoom2]**  
Displays a 16:9 letterbox (anamorphic) image full-screen without distortion.
- [Zoom3]**  
Displays a 2.35:1 letterbox (anamorphic) image full-screen without distortion. At 16:9, displays the image at its maximum (with slight enlargement).

### Input signal that can be displayed

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	○	○
625 (576) / 50i, 50p	○	○
750 (720) / 60p, 50p	○	○
1,125 (1,080) / 60i, 50i	○	○
1,125 (1,080) / 60p, 50p, 24p	○	○

- Mark : Applicable input signal
- Signals other than above may not be displayed properly.
- \* The above signals are reformatted for optimal viewing on your display.

To display / hide the operation guide during [Single View] and [Slideshow] →

**[View]**  
Enters Single view mode to view photo one at a time

**[Slideshow]**  
Lets you view all photos in the slideshow mode

**[View Select]**  
Lets you toggle between thumbnail view and folder view.

**[Option Menu]**  
Contains [Slideshow Settings] menus to set up slideshow.

- [Transition Effect]**  
Effect for photo switching during slideshow  
**[None] / [Dissolve] / [Wipe right] / [Wipe left] / [Wipe up] / [Wipe down] / [Box out] / [Random]**

- [Screen Mode]**  
Screen mode for Single view and Slideshow  
**[Normal] / [Zoom]**  
 - Depending on the photo size, it may not be fully enlarged to fill the screen, e.g. portrait style picture.

- [Interval]**  
Slideshow interval **[5] / [10] / [15] / [30] / [60] / [90] / [120]** (seconds)

- [Repeat]**  
Slideshow repeat [Off] / [On]

- [Back Ground Music]**  
Background music during photo viewing  
**[Off] / [Type 1] / [Type 2] / [Type 3]**

- [Note]**  
\* Picture quality may suffer depending on the slideshow settings.
- Picture setting may not work depending on the slideshow settings.

**Music mode**  

 Operation guide

**[Option Menu]**  
Contains [Video Setup Menu] to set up Movie mode.

While in thumbnail view:  
**[Repeat]**  
Playback repeat within the title [Off] / [On]  
 - Only the selected folder will be repeated.

During movie playback:  
**[Multi Audio]**  
Selects the sound tracks (if available)  
**[Subtitle]**  
Selects the subtitle (if available)  
**[Off] / [Subtitle1] / [Subtitle2] ...)**

**[Aspect Change]**  
**[16:9] / [14:9] / [Just] / [4:3] / [4:3 Full] / [Zoom1] / [Zoom2] / [Zoom3]**  
 - You can also change the aspect using the **ASPECT** button.

To display / hide the operation guide during playback →

**[Option Menu]**  
Contains [Video Setup Menu] to set up Movie mode.

While in thumbnail view:  
**[Repeat]**  
Playback repeat within the title [Off] / [On]  
 - Only the selected folder will be repeated.

During movie playback:  
**[Multi Audio]**  
Selects the sound tracks (if available)  
**[Subtitle]**  
Selects the subtitle (if available)  
**[Off] / [Subtitle1] / [Subtitle2] ...)**

**[Aspect Change]**  
**[16:9] / [14:9] / [Just] / [4:3] / [4:3 Full] / [Zoom1] / [Zoom2] / [Zoom3]**  
 - You can also change the aspect using the **ASPECT** button.

### Supported file format in Media Player

- Photo**  
 JPEG (.jpg, .jpeg)  
 - Supported image resolution: 8 × 8 to 30,719 × 17,279  
 - DCF and EXIF standards  
 - Sub-sampling: 4:4:4, 4:2:2, 4:2:0  
 - Progressive JPEG is not supported.
- Music**  
 MP3 (.mp3) / AAC (.m4a)\*1 / WMA (.wma)\*1,2
- Video**  
 AVI (.avi) / MKV (.mkv) / ASF (.asf, .wmv) / MP4 (.mp4, .m4v) / FLV (.flv) / 3GPP (.3gp, .3g2) / TS (.ts) / PS (.vob, .vro) / RMVB\*3

- \* Copy-protected files cannot be played back.
- \* WMA Pro and WMA Lossless are not supported.
- \* RMVB files are only supported by A408K, A409K, A400K and A410K/M series.

**[Note]**  
 \* Even if these conditions are fulfilled, some files may not be played back depending on how they are encoded.  
 \* Do not use two-byte characters or other special codes for data.  
 \* The device may become unusable with this TV if the file or folder names are changed.

### HDMI connection

This TV incorporates HDMI™ technology. HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard.

HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

- Applicable HDMI features**  
 \* Input audio signal:  
 2ch Linear PCM (sampling frequencies - 48 kHz, 44.1 kHz, 32 kHz)

- \* Input video signal:  
 ⇒ **"Input signal that can be displayed"** (p. 12)  
 Match the output setting of the digital equipment.

**DVI connection**  
 If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable.

When the DVI to HDMI adaptor cable is used, connect the audio cable to the audio input terminal as follows:  
 \* TH-42A410M/X only: use AV1 IN AUDIO terminals  
 \* Other models: use AV IN AUDIO terminals

- [Note]**  
 \* Audio settings can be made on [HDMI1 / 2 Input] in the Sound Menu (p. 10).
- \* These HDMI connectors are "Type A".
- \* These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.

\* Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.

### To playback the selected file only



**[Option Menu]**  
Contains [Music Setup Menu] to set up play mode.

- [Repeat]**  
[Off]: Playback repeat off  
**[On]:** Playback repeat on the selected one file  
**[Folder]:** Playback repeat within the selected folder

**Movie mode**  

 Operation guide

**[Option Menu]**  
Contains [Video Setup Menu] to set up Movie mode.

While in thumbnail view:  
**[Repeat]**  
Playback repeat within the title [Off] / [On]  
 - Only the selected folder will be repeated.

During movie playback:  
**[Multi Audio]**  
Selects the sound tracks (if available)  
**[Subtitle]**  
Selects the subtitle (if available)  
**[Off] / [Subtitle1] / [Subtitle2] ...)**

**[Aspect Change]**  
**[16:9] / [14:9] / [Just] / [4:3] / [4:3 Full] / [Zoom1] / [Zoom2] / [Zoom3]**  
 - You can also change the aspect using the **ASPECT** button.

To display / hide the operation guide and information banner during playback →

**[Option Menu]**  
Contains [Video Setup Menu] to set up Movie mode.

While in thumbnail view:  
**[Repeat]**  
Playback repeat within the title [Off] / [On]  
 - Only the selected folder will be repeated.

During movie playback:  
**[Multi Audio]**  
Selects the sound tracks (if available)  
**[Subtitle]**  
Selects the subtitle (if available)  
**[Off] / [Subtitle1] / [Subtitle2] ...)**

**[Aspect Change]**  
**[16:9] / [14:9] / [Just] / [4:3] / [4:3 Full] / [Zoom1] / [Zoom2] / [Zoom3]**  
 - You can also change the aspect using the **ASPECT** button.

To display / hide the operation guide during playback →

**[Option Menu]**  
Contains [Video Setup Menu] to set up Movie mode.

While in thumbnail view:  
**[Repeat]**  
Playback repeat within the title [Off] / [On]  
 - Only the selected folder will be repeated.

During movie playback:  
**[Multi Audio]**  
Selects the sound tracks (if available)  
**[Subtitle]**  
Selects the subtitle (if available)  
**[Off] / [Subtitle1] / [Subtitle2] ...)**

### USB Flash Memory

For playing back in Media Player  
 Format: FAT16, FAT32  
 Compliance:  
 Supports only USB1.1 or USB2.0 standard.  
 Maximum USB capacity supported is 16GB.  
 USB Hub or card adapter is not supported.

- \* Data modified with a PC may not be displayed.
- \* Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- \* Do not touch the pins on the device.
- \* Insert the device in the correct direction. Otherwise this can damage device or TV.
- \* Electrical interference, static electricity, or erroneous operation may damage the data or device. Panasonic is not liable for any deterioration or damage of data or device during operations with the TV.
- \* It is recommended to connect the USB Flash Memory directly to the TV's USB port.
- \* Some USB devices or USB HUB may not be used with this TV.
- \* You cannot connect any devices by using USB card reader.

\* Additional information for USB devices may be on the following website. (English only)  
<http://panasonic.jp/support/global/cs/tv/>

## Troubleshooting

Before requesting service or assistance, please follow these simple guides to resolve the problem.

If an error message appears, follow the message's instructions.  
 If the problem still persists, please contact your local Panasonic dealer for assistance.

### Screen

**Red, blue, green or black spots on the screen**  
 ⇒ This is the characteristic of liquid crystal panels. The liquid crystal panel is built with very high precision technology. Occasionally, a few non-active pixels may appear on the screen as points of red, green, blue or black. This does not affect the performance of your TV and it is not a quality problem.

**Chaotic image, noisy**  
 ⇒ Set [P-NR] in the Picture Menu to remove noise (p. 10).  
 ⇒ Check nearby electrical products (car, motorcycle, fluorescent lamp).

**No image is displayed**  
 ⇒ Check the settings of [Contrast], [Brightness] or [Colour] in the Picture Menu (p. 9).

⇒ Check the TV is in AV mode. If the TV is in AV mode, check the selected input mode match the output of the external equipment (p. 7).

 
**Blurry or distorted image**  
 (no sound or low volume)  
 ⇒ Resets channels ⇒ [Auto Tuning] or [Manual Tuning] (p. 11)

## Using the Menu Functions


### 1 Display the menu

MENU

### 2 Select the menu



### 3 Select the item you want, then change / adjust or access

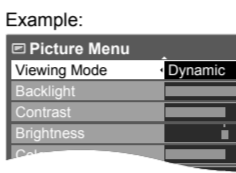

\* Change the setting option

\* Adjust the intensity bar

\* Access the submenu

\* Child Lock Access

**[Note]**  
 \* A different menu will be displayed in the mode of Media Player (p. 8 - 9).

\* Only available items can be selected.

### Picture Menu

**[Viewing Mode]**  
Sets preset picture mode for each input.

**[Dynamic]:** Improves contrast and sharpness.  
**[Normal]:** For viewing in a normal lighting condition.  
**[Cinema]:** Improves the performance of contrast, black and colour reproduction.

**[True Cinema]:** Reproduces the original image quality precisely without any revision.

**[Game]:** For viewing when playing games  
 - Not valid on TV mode.

- To display a continuous record of time spent using Game mode ⇒ [Playing Time Display] (p. 11).

In each Viewing Mode, [Contrast], [Brightness], [Colour], [Sharpness], [Tint], [Colour Balance], [Eco Mode], [P-NR] and [3D-COMB] can be adjusted and stored for each input.

**[Backlight] / [Contrast] / [Brightness] / [Colour] / [Sharpness]**  
 Adjusts the levels of these options to your preference.

**[Eco Mode]**  
Automatic Brightness Control function

Adjusts picture density from 3 levels for each channel.

\* Select the channel to adjust and set this function.

**[Channel Colour Set]**  
Adjusts the suitable colour density from 3 levels for each channel.

**[Eco Mode]**  
Automatic Brightness Control function

Adjusts picture density from 3 levels for each channel.

\* Select the channel to adjust and set this function.

**[P-NR] (Picture Noise Reduction)**  
Reduces unwanted picture noise and flicker noise in the contoured parts of a picture [Off] / [Min] / [Mid] / [Max]

**[3D-COMB]**  
Makes still or slow moving pictures more vivid [Off] / [On]  
 \* Occasionally, while viewing still or slow moving pictures, colour patterning may be seen. Set to [On] to display sharper and more accurate colours.

\* For PAL or NTSC signal reception only.  
 \* Not valid on Component, HDMI and Media Player.

**[Reset to Defaults]**  
Press **OK** to reset the present picture [Viewing Mode] of the selected input to the default settings.

### Sound Menu

**[Mode]**  
Sets preset sound mode. The selected mode affects all input signals.

**[Music]\*1:** Improves sound quality for watching music videos, etc.  
**[Speech]\*1:** Improves sound quality for watching news, drama, etc.

**[User]:** Adjusts the sounds manually by using the equaliser  
 - For the User mode, [Equaliser] will appear on the Sound Menu instead of [Bass] and [Treble]. Select [Equaliser] and adjust the frequency ⇒ (below).

\*1 In Music and Speech modes, you can adjust [Bass] and [Treble] settings, and those settings will be stored for each mode.

**[Bass] / [Treble]**  
Adjusts the effect to your preference.

**[Equaliser]**  
Select the frequency and change the frequency level by using the cursor buttons.

\* This function is available when [Mode] is set to [User].  
 \* To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.

\* To reset the levels of each frequency to the default settings, select [Reset to Defaults] by using the cursor button, and then press the **OK** button.

### Setup Menu

**[Off Timer]**  
Sets the time until the TV automatically goes to Standby mode [Off] / [15] / [30] / [45] / [60] / [75] / [90] (minutes)

**[Child Lock]**  
Locks channels / AV input modes  
 Enter the PIN number (4 digits) to access.

**[Change PIN]**  
Lets you change your PIN number.  
 - Enter a new PIN number twice.  
 - Performing [Shipping Condition] erases the PIN number and all settings.

**[Child Lock List]**  
Displays the Child Lock List.  
 - From the list, selects the channel / input to be locked.

**[Tuning Menu]**  
⇒ (p. 11)

**[OSD Language]**  
Changes language for on-screen displays ⇒ (p. 6)

### [Tint]

Adjusts the picture hue.  
 \* For NTSC signal, Component or HDMI input

**[Colour Balance]**  
Sets the overall colour tone of the picture.

**[Cool] / [Normal] / [Warm]**  
 \* Not valid when [Viewing Mode] is set to [True Cinema]

**[Auto Gain Control]**  
Automatically regulates large sound level differences between channels and inputs [Off] / [On]

**[Volume Correction]**  
Adjusts the volume of individual channel or input mode

**[Speaker Distance to Wall]**  
Compensates for the low frequency sound due to the distance between the speakers and the wall [Up to 30cm] / [Over 30cm]

\* If the back space between the TV and wall is over 30 cm, [Over 30cm] is recommended.

\* If the back space between the TV and wall is within 30 cm, [Up to 30cm] is recommended.

**[MPX]**  
Selects multiplex sound mode (if available)

**[Stereo]:** Use this normally  
**[Mono]:** When stereo signal cannot be received  
**[M1] / [M2]:** Available while mono signal is transmitted

**[HDMI1/2 Input]**  
Selects to fit the input signal (p. 12)

**[Digital]:** When sound is carried via the HDMI cable connection  
**[Analogue]:** When sound is not carried via the HDMI-DVI adaptor cable connection  
 \* For HDMI input

**[Reset to Defaults]**  
Press **OK** to reset the present settings of [Mode], [Balance] and [Surround] to the default.

### Sound Menu

**[Mode]**  
Sets preset sound mode. The selected mode affects all input signals.

**[Music]\*1:** Improves sound quality for watching music videos, etc.  
**[Speech]\*1:** Improves sound quality for watching news, drama, etc.

**[User]:** Adjusts the sounds manually by using the equaliser  
 - For the User mode, [Equaliser] will appear on the Sound Menu instead of [Bass] and [Treble]. Select [Equaliser] and adjust the frequency ⇒ (below).

\*1 In Music and Speech modes, you can adjust [Bass] and [Treble] settings, and those settings will be stored for each mode.

**[Bass] / [Treble]**  
Adjusts the effect to your preference.

**[Equaliser]**  
Select the frequency and change the frequency level by using the cursor buttons.

\* This function is available when [Mode] is set to [User].  
 \* To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.

\* To reset the levels of each frequency to the default settings, select [Reset to Defaults] by using the cursor button, and then press the **OK** button.

## Specifications

### Model no.

39-inch model	42-inch model	TH-42A410G
TH-39A400X	TH-42A400G	TH-42A410M
	TH-42A400K	TH-42A410X
	TH-42A408K	TH-42A409K

**Power source**  
AC 220 - 240 V, 50/60 Hz

39-inch model	42-inch model
71 W / 0.2 W	A400G/K, A40