


Panasonic®

Fully Automatic Washing Machine

Operating Instructions

Model No. **NA-F70B1**
NA-F62B1

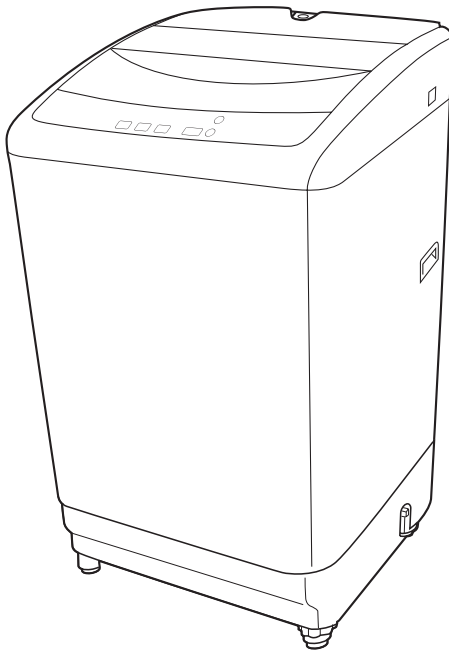

Thank you very much for purchasing Panasonic Washing Machine.

Before operating this washing machine, please read these instructions completely, paying special attentions to Safety & General Precautions.

W9901-7ECA0
PHAT0802-0
Printed in Thailand

Contents

ITEM		PAGE
Safety & General Precautions		3-4
Name of parts		5
Procedures before washing		5
Determining load and detergent levels with the Quick Indication		6
Laundry Detergent		6
How to use liquid detergent		7
How to use bleach		7
How to use softener		7
When putting the softener in or removal of the lint filter is difficult.		7
How to use powdered synthetic detergents		8
How to use powdered detergent		8
"Economy" Laundering		8
Laundry Tips		8
Operations Panel		9
Miscellaneous Options	NORMAL Course	10
	SPEEDY Course	10
	DELICATE Course	11
	RESERVE Program (9 hours)	11
CHILD LOCK program		12
Cancelling end buzzer after washing		12
Process setting		13
Maintenance: TUB HYGIENE Course		13
Maintenance: TUB DRY		14
Maintenance		14
Please observe the following Instructions		15
Caution		15
How to install		16
Install Washing Machine Horizontally		16
Connect the water supply hose		17
Drain Hose Installation Instruction		18
Bottom Cover Installation Instruction		18
Troubleshooting		19
Error Indication		20
Specification		20

Safety & General Precautions

To prevent the risk of danger or material loss or damage to the user of others, make sure to follow the precautions described below.



WARNING

May cause a serious injury or death.



CAUTION

May cause physical injury or damage other items.



WARNING

Never disassemble, repair or remodel this washing machine.


If you disassemble, repair or remodel the washing machine by yourself, it can cause fire or irregular action that results in injury.

Consult your dealer for repair.




When you are cleaning your washing machine, do not apply water directly to any part of the washing machine.

It will cause short circuit and electric shock.

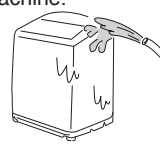

Do not place the washing machine on a damp place such as in a bathroom or exposed to the outside weather.

 There is risk of the insulation deteriorating, electric shock and overheating, or breakdowns due to rust.



Do not place any burning object including burning candles or cigarettes, on top or near the washing machine.

There is a danger of fire or set deformation.



Never touch the laundry with your hand during spin until the tub has completely stopped spinning.

If you touch the laundry, even if the tub is rotating slowly, there is a danger of injury if the laundry becomes entangled with your hand. Pay particular attention to protecting children from such injury.



Please do not wash or spin laundry which stained with gasoline, kerosene, benzene, paint thinner or the likes of it.

There is a risk of explosion or fire burn.



Do not use power plug socket or wiring equipment more than their rated capacity.

When you use the socket or wiring more than its rated capacity by connecting multiple appliances, it can cause fire due to overheating.

Never disconnect the power plug by pulling the power cord. Hold the power plug as you pull it out.

There is a danger of an electric shock or short circuit which may cause a fire.



Make sure that the ground is attached to the power supply outlet.

Otherwise, there is a danger of electric shock at the time of machine trouble or electricity has leaked.

- Be sure to ask your dealer about grounding work.



Make sure to push the power plug completely into the power supply outlet.

If the power plug is not completely pushed into the outlet, this may cause electric shock and fire due to overheating.

- Never use a damaged power cord.





WARNING

Do not damage the power cord and power plug.

(Do not damage, modify, immoderately bend, twist, pull, or bundle the power cord, do not put the power cord and power plug close to heating appliances, do not put anything heavy on power cord and power plug.)

- If using the damaged power cord it will cause fire and current shortage.
- Consult your dealer about power cord and power plug repairing.

Remove any dust which may accumulate around the power cord.

When dust has accumulated on and around the power plug, and the dust gets damp or wet, the insulation plug become defective and may causes a fire. Pull out the power plug, and wipe off dampness with a dry clean laundry.

- If you are not going to use the washing machine for a long period of time, pull the power plug out of the socket.

Always pull the power plug out of the power supply before doing cleaning or maintenance of the washing machine.

- Otherwise, there is a risk of electric shock or injury.



Do not pull the power plug out of the socket or push in the power plug inside the socket with wet hand.

It will cause electric shock.




CAUTION

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Do not put your hand or foot under the washing machine while the machine is operating.

There is a rotating mechanism at the bottom of the machine, so you could be injured.

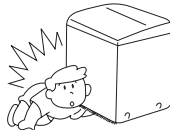

Do not climb up or put anything heavy on the top of the machine.

You could be injured due to set deformation or breakage of the washing machine.



Do not wash and spin waterproof sheets and garments.

(Example) Raincoats, outfits (coats/jackets and pants) for fishing and skiing, etc.

The items could be damaged or you could be injured due to irregular vibration during the spin cycle.




Always check the hose connection by turning on the water tap before starting washing.

If the fixing screws are loose, it will cause water leakage that could cause unexpected damage.

Do not use water with temperature above 50°C.


- The plastic parts will become deform, resulting in set breakdown.

Name of parts

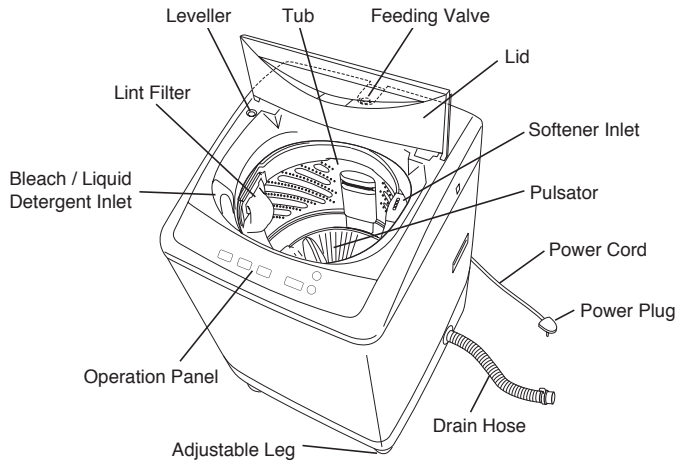

Accessories

 Water Supply Hose (1)




Length: 1.0 m

Water Tap Adaptor (1)



Note: Water Tap Adaptor is set to the Water Supply Hose.

Bottom Cover (1)

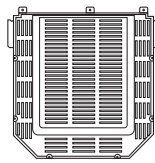


Hose Hole Cover A (1)



Screw (9)
Note: For Bottom Cover

Procedures before washing

- Check the installation

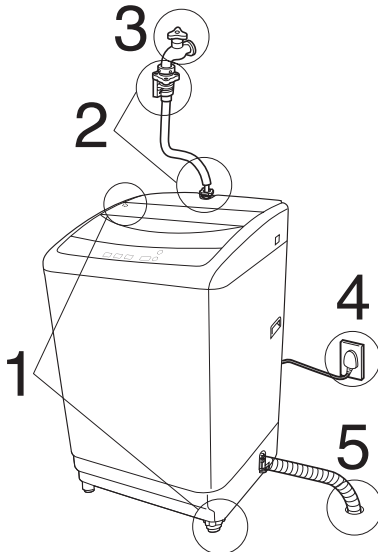

[NOTE]

Before installation, please make sure to install the bottom cover. See page 18 for details.

See pages 16~18 for details.

- 1 Level the washing machine by adjusting the adjustable leg and using the leveller as reference.
- 2 Connect the water supply hose.
- 3 Turn on the faucet.
- 4 Plug power cord into socket outlet.
- 5 Insert the drain hose to drain.

Determining load and detergent levels with the Quick Indication

- 1 Put the laundry into the machine.




Press the [POWER ON] button and then press the [START/HOLD] button after putting in the laundry.

- 2 Allow the machine to churn the laundry for 5 seconds.




The pulsator operates for about 5 seconds without any water in the tub to measure the amount of laundry. If there is already water in the tub, the machine will not operate and the water level will be set to 51L. (45L in the case of NA-F62B1)

- 3 Detergent volume indications.

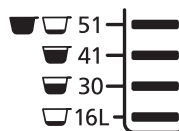

A lamp will light up indicating the appropriate water level and amount of detergent according to the laundry. Add this amount of detergent.

■ Detergent indicator

 







 

The  indicates the number of scoop of compact powdered laundry detergent formula to be inserted using the measuring scoop in the tub (1 scoop = about 40 grams).

For information concerning other types of laundry detergent, see the table below.

- The pulsator operates without water in the washing tub in order to measure the amount of laundry.
- According to laundry load, put in the detergent then close the lid. For better detergent dissolve, put in at the area of water feeding.
- Change the water level setting in the following cases:
 - When placing the wet laundry inside the tub, the water level will be indicated 51L (45L in the case of NA-F62B1) even though the laundry weight is light.
 - When you put in light weight laundry or laundry that doesn't absorb water easily (laundry made of synthetic fiber and mixed fiber, etc.).



Laundry Detergent


Detergent type	Synthetic detergents			Powdered detergent
	Concentrated type	Liquid type		
	(25g per 30L of water)	(25ml per 30L of water)	(40ml per 30L of water)	
Water level (Laundry volume)	 One measuring scoop Powder	 Concentrated liquid	 Non Concentrated liquid	 Powder
(NA-F70B1) 51L (Approx. 7.0kg)	 1 1/5 scoops	approx. 43ml	approx. 68ml	approx. 68g
(NA-F62B1) 45L (Approx. 6.2kg)	 1 scoop	approx. 38ml	approx. 60ml	approx. 60g
(NA-F70B1) 41L (Approx. 3.0kg)	 1 scoop	approx. 34ml	approx. 55ml	approx. 55g
(NA-F62B1) 35L (Approx. 3.0kg)	 4/5 scoops	approx. 29ml	approx. 47ml	approx. 47g
30L (Approx. 1.5kg)	 3/5 scoops	approx. 25ml	approx. 40ml	approx. 40g
16L (Approx. 0.3kg)	 2/5 scoops	approx. 13ml	approx. 21ml	approx. 21g

- The figures in parentheses in the water level column indicate the approximate weight of the laundry load.
- Please use the standard amount of laundry detergent as printed on the detergent container.
- Some laundry detergents have their own prescribed methods of use. Please read the instructions to your laundry detergent.
- When a large quantity of suds is produced, use less detergent or switch to a low-suds detergent.

How to use liquid detergent

Put in the liquid detergent according to the water level into the bleach / liquid detergent inlet.

Bleach / Liquid Detergent Inlet

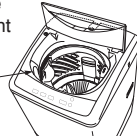

[NOTE]


- Liquid detergent, like powdered detergent is not easily dissolved and can leave scum along the inside of the washing tub, so be sure to rinse thoroughly.

How to use bleach

■ Liquid bleach

- Dilute fully with water and pour in before pressing [START/HOLD].

Bleach / Liquid Detergent inlet

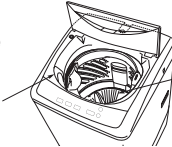

■ Powder bleach

- Place directly into the tub during fill.
- Follow the instruction on the bleach container.

How to use softener

Adding softener

Please put it in before beginning the wash.

- Because the (Concentrated) type is sticky and adheres to the opening, dilute with 3 times the amount of water.
- Pour it in slowly. When it is difficult to add, turn the wash tub to the right to locate the Softener Inlet in a more convenient position (see the following clause for details), or release the cassette case from the Balancer case and pour into it.
- Cassette case can be removed by pulling the top toward inside.

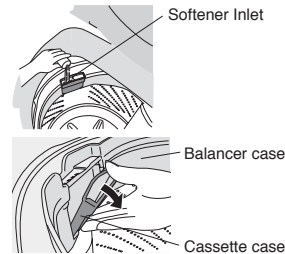


Table of softener quantities

(Normal)20 ml softener per 30L of water.
(NA-F70B1)

Water level		51L	41L	30L	16L
Softener	Normal	Approx. 34ml	Approx. 27ml	Approx. 20ml	Approx. 11ml
	Concentrated	Approx. 11ml	Approx. 9ml	Approx. 7ml	Approx. 4ml

(Concentrated) ... 6.6 ml softener per 30L of water.
(NA-F62B1)

Water level		45L	35L	30L	16L
Softener	Normal	Approx. 30ml	Approx. 23ml	Approx. 20ml	Approx. 11ml
	Concentrated	Approx. 10ml	Approx. 8ml	Approx. 7ml	Approx. 4ml

[Please note]

- Please do not let the softener sit in the water for a long time.
- Please do not open the lid during the spin cycle. If the lid is opened, softener will be added too early and then its effectiveness will decrease.
- If rinsed water is used, results will not be as effective.
- Softener is automatically added to the tub at the end of the rinse cycle.

When putting the softener in or removal of the lint filter is difficult.

The wash tub can be turned lightly to a convenient position.

- How to turn the wash tub.
 1. Push the power switch on.
 2. After 15 seconds with a sound "click", rotate the wash tub.


[NOTE]

- The wash tub does not rotate while filled with water.
- The wash tub does not rotate after pushing the [START/HOLD] button.
- The water filled after 15 seconds is drained automatically.

How to use powdered synthetic detergents

POWDERED SYNTHETIC DETERGENT [CONCENTRATED TYPE]

Color transfer and color fading will occur if the detergent directly in contact with the laundry (for a long time). Please use white handkerchief, etc. to wrap the detergent before put it into the tub.

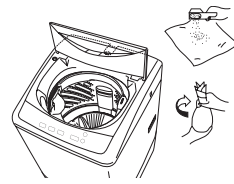

How to use powdered detergent

How to dissolve

1. Fill the washing machine tub with water one level below the water level that will be used. (For low water level setting, the same water level will be used.)
2. Add the powdered detergent and let the machine run for about 3 minutes.
3. Put the laundry in and begin washing at the desired level. Set the [WATER LEVEL] button.

Dissolving hard-to-dissolve detergent

1. Pour 5 liters of water at about 30°C into a container.
2. Dissolve the detergent by adding it little by little while churning the water.
 - In order to keep it from hardening or sticking, mix it well and dissolve it, then pour it into the washing tub.

[Warning]

- Powdered detergent is not easily dissolved compared to synthetic detergent, be certain to rinse thoroughly. If it is not rinsed well laundry may be tinged with yellow or smell of detergent. If too much detergent is added, or if it is added directly to cold water, scum and clumps which are not completely dissolved will stick to the inside of the tub and hose. These may float up and dirty the laundry.

“Economy” Laundering

Using wash water twice







Wash lightly soiled laundry in the first load.

1. Put the laundry in the tub, and press [POWER ON].
 2. Press [PROCESS] button for [WASH] and press [START/HOLD] button.
 3. Put in the detergent.
 4. Wash finishes.
 - * Take the wet laundry out.
-
8. Put wet laundry which has been washed back into the tub again.
 9. Press [PROCESS] button for [RINSE] and [SPIN], then press [START/HOLD].
 10. Close the lid and wait until laundry will be completed.

Wash heavily soiled laundry in the second load.


5. Load the laundry.
6. Press [POWER ON] to carry out washing, rinsing and spinning. Add the detergent a little when you increase the water level or refilling water.
7. Wash finishes.
- * Remove the laundry.

Laundry Tips

<p>Brush off laundry before washing them.</p> 	<p>Turn inside out any garments which give off lint or lint balls.</p> 	<p>Press down lightly on bulky items while the tub is filling with water to get them thoroughly soaked.</p> 
<p>Put a little detergent on a brush and lightly scrub the tough stains off collars and cuffs.</p> 	<p>Put laundry with lace attached, lingerie, nylon stockings, chemical fiber transparent fabrics etc. in a washing net.</p> 	<p>For laundry which has long cord or clasps attached, tie the cords on aprons, pillow covers and the like, and fasten clasps.</p> 

Operations Panel


 Fuzzy logic control is used to recommend the proper water level and amount of detergent for the amount of laundry being done.

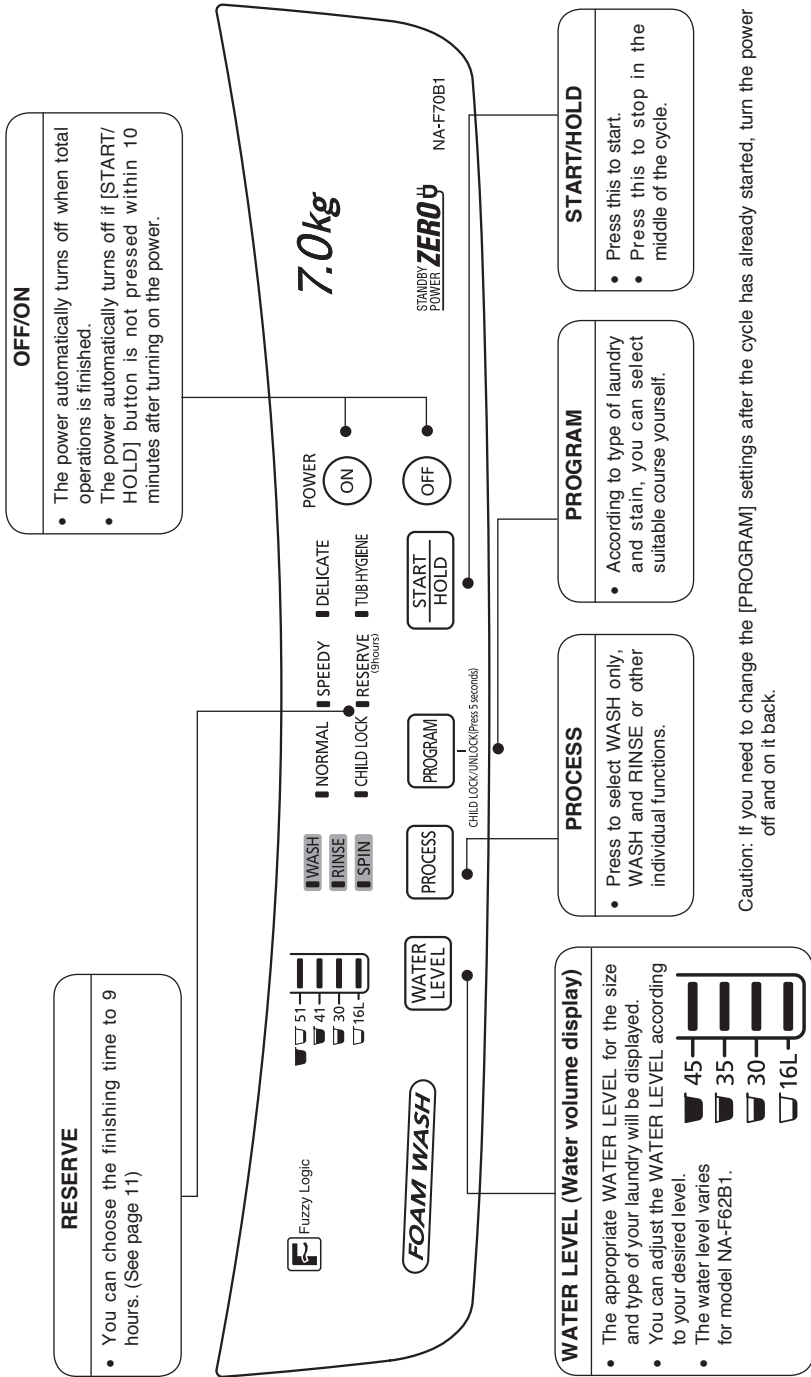

Caution: If you need to change the [PROGRAM] settings after the cycle has already started, turn the power off and on it back.

NORMAL Course

Suitable for normal washing of casual laundry.

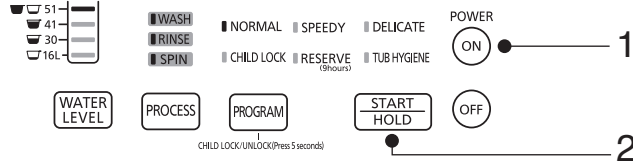


- 1 Press the [POWER ON] button and put in the laundry.
- 2 Press the [START/HOLD] button.
 - The light will indicate “NORMAL” Course automatically.
 - The machine will measure the load size without water (laundry sensing).
 - The water level will be indicated automatically.
 - You can adjust the water level according to your desire.
- 3 Put in the appropriate amount of detergent for the water level. Then close the lid.
 - Different brands of detergent may have different measuring scoops sizes. If the scoop holds other than 40 grams, add the amount of detergent recommended by the detergent makers for the selected water level. See page 6 for details.

■ Add softener. See page 7 for details.

The buzzer lets you know when the washing is finished.

SPEEDY Course

Suitable for washing lightly soiled laundry or quick wash.

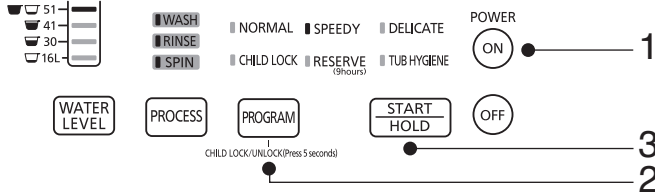


- 1 Press the [POWER ON] button and put in the laundry.
- 2 Press the [PROGRAM] button once for selecting “SPEEDY” Course.
- 3 Press the [START/HOLD] button.
 - The light will indicate “SPEEDY” Course automatically.
 - The machine will measure the load size without water (laundry sensing).
 - The water level will be indicated automatically.
 - You can adjust the water level according to your desired level.
- 4 Put in the appropriate amount of detergent for the water level. Then close the lid.
 - Different brands of detergent may have different measuring scoops sizes. If the scoop holds other than 40 grams, add the amount of detergent recommended by the detergent makers for the selected water level. See page 6 for details.

■ Add softener. See page 7 for details.

The buzzer lets you know when the washing is finished.

DELICATE Course

Suitable for washing soft laundry.

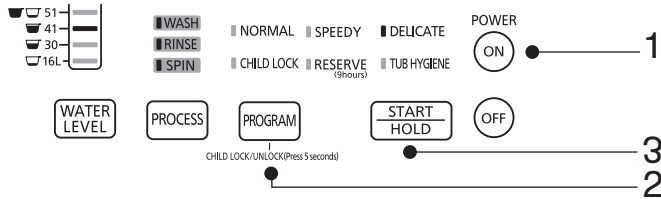


Remark: Amount of laundry that can be washed at one time : 3.0 kg

- 1 Press the [POWER ON] button and put in the laundry.
 - 2 Press the [PROGRAM] button twice for "DELICATE" Course.
 - The light will indicate "DELICATE" Course automatically.
 - 3 Press the [START/HOLD] button.
 - Water level will be indicated 41L (35L in the case of NA-F62B1). It can be adjusted to 30L only.
 - 4 Put in the appropriate amount of detergent for the water level. Then close the lid.
 - Different brands of detergent may have different measuring scoops sizes. If the scoop holds other than 40 grams, add the amount of detergent recommended by the detergent makers for the selected water level. See page 6 for details.
- Add softener. See page 7 for details.

The buzzer lets you know when the washing is finished.

RESERVE Program (9 hours)

The washing cycle will be finished approximately 9 hours from the current time (Sometimes the operation time may exceed the reserve time caused by the water feeding and draining condition). Programming timer [RESERVE] only can be used with [NORMAL] and [SPEEDY] course.

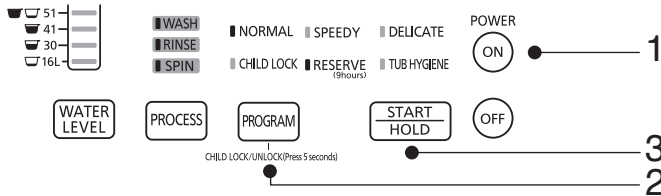

- 1 Press the [POWER ON] button and put in the laundry.
 - 2 Press the [PROGRAM] button three times for "NORMAL RESERVE" course. Press the [PROGRAM] button four times for "SPEEDY RESERVE" course.
 - The "RESERVE" and "NORMAL" light will be indicated.
 - 3 Press the [START/HOLD] button.
 - The machine will measure the load size without water (laundry sensing).
 - The water level will be indicated automatically.
 - 4 Put in the appropriate amount of detergent according to the water level. Then close the lid.
 - The water level indication (recommended detergent amount) will go off 2 minutes after starting the program, but only indicate the [RESERVE]. So, check the water level for recommended detergent amount before the indication goes off.
 - Change the Reserve program. Press the [POWER OFF] button and start from step 1 again.
 - Cancel the Reserve program. Press the [POWER OFF] button.
 - Check the contents of the Reserve program. Keep pressing [PROGRAM] button.
- Add softener. See page 7 for details.

Washing cycle will be finished after 9 hours.

CHILD LOCK program

This is an emergency alarming mode with a continuous buzzer sounds when child open the lid during operation to prevent a child from drowning (condition where there is a water inside the tub) by falling into the tub which contains water.

Close the lid to stop the buzzer. If the lid is kept open for more than 10 seconds, the machine will force drain the water inside the tub assuming that the child had fallen into the tub but make sure that the drain hose is laid down.

- This is different from the function that lock button operation and the lid.

■ IN THE CASE OF FORCE DRAINING.

There will be an abnormal alarm (flickering of lamps and buzzer).
Please check inside the tub.

■ RESET METHOD OF ABNORMAL ALARM.


Button operation cannot be used.

At first, unplug the power cord from the outlet and re-plug it again after 5 seconds.

Please repeat the operation from the beginning because the process had been cancelled.

■ Please do not leave water inside the tub as [CHILD LOCK] mode does not function in the following case:

- In the case of power supply off.
- In the case when forget to lay down the drain hose.
- Please close the lid immediately after press the [START/HOLD] button because when the lid is open, there will be an abnormal alarm and force drain during water feeding.

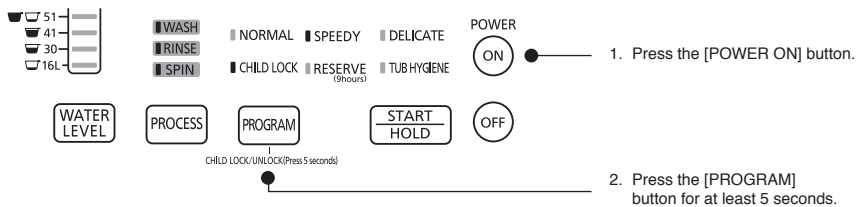

■ SETTING METHOD

1. Press the [POWER ON] button.

2. Press the [PROGRAM] button for at least 5 seconds.

The buzzer sounds (two times for setting) and the [CHILD LOCK] indication turns on.

■ CANCELLING METHOD


Repeat the operation 1 and 2.

The buzzer sounds (4 times for cancelling) and the [CHILD LOCK] indication turns off.

[NOTE]

When you press [PROGRAM] button, it switches over, from "NORMAL" to "SPEEDY", for example.

Cancelling end buzzer after washing

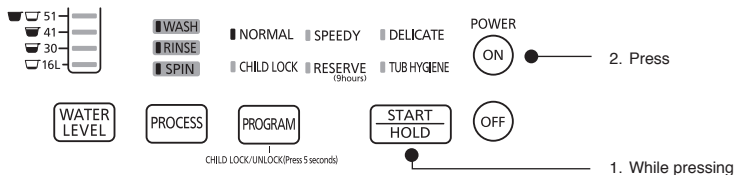


1. Press [START/HOLD] button and [POWER ON] button at the same time, release [POWER ON] button and hold [START/HOLD] button at least for 3 seconds. Two times beep sound indicates the end buzzer of washing has been cancelled.

- Repeat step 1 to activate the end buzzer. Four times beep sound indicates the end buzzer has been activated.

- When the power cord is unplugged or a power outage occurs, the last setting of the end buzzer will be remained.

Process settings

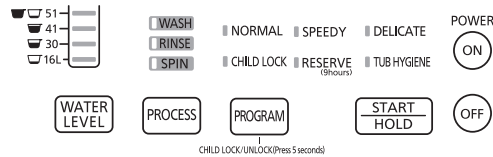

You can select **PROGRAM** to wash your own laundry according to your preferences. (By pressing [PROCESS] button)


■ WASH	To reuse the wash water. • After washing, the wash water is left in the tub and the machine stop operation.
■ SPIN	To spin the separately washed laundry. • If the water is left in the tub, it will drain before spinning. • If the lid is open, it will only drain without spin.
■ WASH ■ RINSE	To reuse the rinse water. • After washing and rinsing, the rinse water is left in the tub and the machine stop operation.
■ WASH ■ SPIN	To wash with water (without detergent). • The machine will spin automatically without rinsing after washing.
■ RINSE ■ SPIN	To rinse and spin the laundry soaked with detergent. • If the water is left in the tub, it will drain and followed by the intermediate spin before start of rinsing.

- In the case, when [SPIN] or [RINSE] [SPIN] is selected, if there is water in the tub, the machine will start from draining and if there is no water in the tub, it will start from spinning. So it will take a little while before the machine start operating.
- IN THE CASE WHEN [CHILD LOCK] MODE IS SET.
In some cases, if the lid is opened when the tub contains water, the machine will start force draining. In this case, cancel the [CHILD LOCK] mode.

Maintenance

To prevent fungus growth at the washing and spinning tub.

“TUB HYGIENE” Course

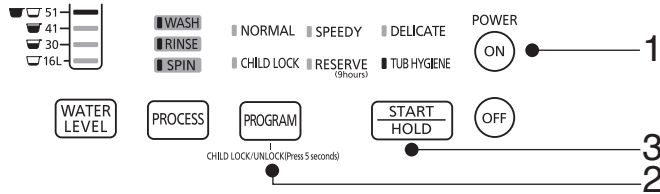

- 1 Press the [POWER ON] button.
- 2 Press the [PROGRAM] button five times • The [TUB HYGIENE] light will be indicated.
for “TUB HYGIENE” Course.
- 3 Press the [START/HOLD] button.
- 4 When filled up with water, press the [START/HOLD] button, and pour about a cup of chlorine system bleach for clothing use directly into the washing and spinning tub. (Approx. 200ml per 50L of water.)
- 5 Close the lid, and press the [START/HOLD] button.
 - ※ Do not operate while clothing is in the washing tub.
 - ※ Cancel the “CHILD LOCK” when it is active. Refer to page 12.

Operation will be finished in 2 and a half hours.

This is the course to prevent fungus growth at the washing and spinning tub using the “Chlorine system bleach for clothing use”, available in most markets, to keep the tub clean.

- ※ Do not use the oxygen system bleach or chlorine system bleach for kitchen use. (Too much lather may overflow.)
- Frequency for care : Once a month
- Operation will be continued for 2 and a half hours.


[NOTE]

- Fungus growth at the washing and spinning tub varies depending on ambient conditions.

Maintenance

TUB DRY

This process is to dry the tub during 30 minutes of spinning operation and prevents fungus from growing inside.

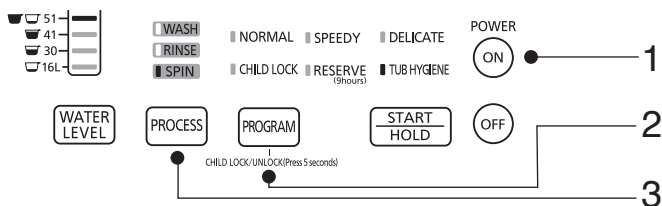

Remark: Please be informed not to put laundry inside the tub during this program.

- 1 Press the [POWER ON] button.
- 2 Press the [PROGRAM] button five times • The [TUB HYGIENE] light will be indicated.
for [TUB HYGIENE] Course.
- 3 Press the [PROCESS] button once for
selecting only "SPIN".
- 4 Press the [START/HOLD] button. • Spinning operation will be operated for 30
minutes


The buzzer lets you know when the washing is finished.

Maintenance

Lint filter / Water supply hose filter / Main unit and tub


Water supply hose filter

- When water supply seems constricted.
 - Be absolutely sure to follow the procedures as described, otherwise water will spray out.
1. Turn off the water faucet.
 2. Press the [POWER ON] button.
 3. Press the [START/HOLD] button.
The WATER LEVEL will light up a few seconds later.
 4. Press the [POWER OFF] button to turn off the power.
 5. Loosen the nut.
 6. Take off the hose.
 7. Clean the filter.

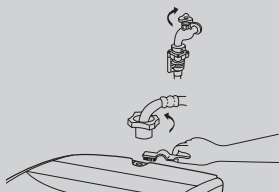

Lint filter

- When the filter is full.
1. Remove the filter.
 2. Remove the lint from the filter.
 3. Put the filter back in.
Make sure it clicks into place.
- When the filter is torn, etc.
Obtain another one from the place of purchase.
 - Turn the wash tub if the filter cannot be removed easily.
(See page 7 for details.)

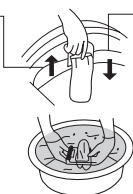

Main unit and tub

- **Main unit**
Wipe with a soft cloth. Use a neutral dishwashing liquid or soap for stubborn places.
* Do not apply water directly.
* Do not use cleanser, paint benzene, alcohol, kerosene, etc.
* Follow any instructions that come with a chemically treated cloth.
- **Upper part of the tub**
Wipe with a damp cloth.
* Do not apply water directly.
The floor could get wet.

Please observe the following Instructions

If the spinner tub does not stop within 15 seconds after you open the lid during spinning, immediately stop using the machine, and contact your dealer for repair.

Do not spray anything or pour water over the lid.

- Do not put water, pesticides, hair products, deodorants, or any other such liquids on the lid. (To avoid electric shock and malfunctions)




Do not put too much laundry.

- Put laundry completely into the tub. Never allow the laundry to protrude out of the tub. (This causes torn laundry or damage to the plastic parts.)



Do not hold magnets or cards with magnetic strips near the washing machine.

- Do not hold cards with magnetic strips near the washing machine. (The cards may become unusable.)
- Do not hold a magnet near the washing machine while it is in operation. (The tub may stop spinning.)

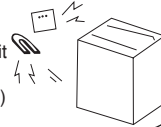

Keep condensation from getting on the floor.

- When the air temperature is high and the water temperature is low, condensation will sometimes run off onto the floor.



Do not put in too much detergent.

- Rinsing cannot be done sufficiently.
- The floor could be wet by the foam flowing out of the machine.



Do not use a cover made of vinyl chloride. (It could damage the plastic or paint.)

- If you intend to use such a cover, first place a cloth over the washing machine to keep it from coming in contact with the cover.



When you will not use the washing machine for a long period of time.

- Turn off the power and pull out the power plug.



Do not put any type of charger stand on the washing machine.

- When you place the charger stand for an electric toothbrush, etc., close to the washing machine, malfunction will result.




After finishing don't forget:-

- Please shut off the faucet.
- Please don't let water store for a long time.
- * This is to prevent water soaking.



Caution

- It is advisable not to start the machine direct with spinning process but to start with normal washing cycle.
- Please be aware, when the laundry is unbalanced during spinning, some knocking sound may occur and the spin may stop followed by an additional automatic rinsing.
- If the unbalance condition continue for 3 times, the washing machine will stop functioning automatically.
- You can manually distribute the laundry evenly to ensure the laundry are balanced inside the tub.

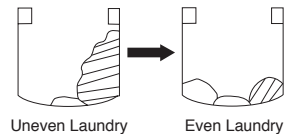

Cautions on parts

If the supply power cord is damaged. It must be replaced by Service Center or a similarly qualified person in order to avoid a hazard.


How to install

Placement

- Do not install the washing machine in any extremely damp place such as a bathroom, or in a place exposed to the weather. There is a danger of electric shock, fire, machine trouble and deformation of machine.
- If machine is installed on the floor, be sure that carpet does not block any openings to prevent it from closing any ventilation openings.
- Do not install the washing machine exposed to direct sunlight (This could cause machine trouble, deformation and other problem.)

Power cord

- Make sure to push the power plug completely into the socket outlet. If the power plug is not completely pushed into the outlet, this will cause electric shock and fire due to overheating.

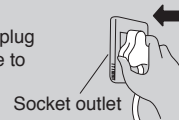


Establish a ground (In case of two-wire power cords)

- When there is a grounding receptacle on power supply outlet.
- When carbon ground rod (sold separately) is used.
- Do not connect to gas pipe, water pipe, or ground wire of telephone or lighting rod.
- Reestablish a ground when you change installation location or move.
- For further information, contact the distributor or service technician.



WARNING

 Make sure to establish a ground.
There is a risk of electric shock caused by a leakage of electricity.




Install Washing Machine Horizontally

- 1 Place the washing machine on a flat and secure location.
- 2 Open the lid, leveller is already fix on the Plastic Body surface. Visually check that the bubble of the leveller is inside the mark from the front and top.

When the bubble is inside the mark



- There is no need to make a height adjustment.

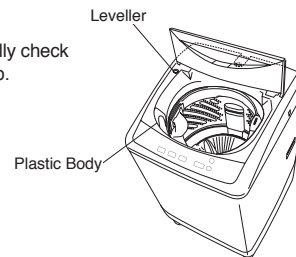


3 Adjust height


When the bubble is largely out of mark



 
- The floor is largely inclined against the direction that the bubble is leaning.
- Let the bubble inside the mark by placing a board under the leg on the other side.



When the bubble is a little out of mark

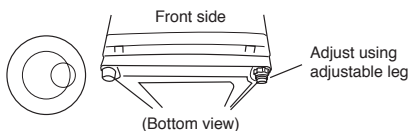

1. Turn the Adjustable Leg Knob towards (LOOSEN) direction to loose it.
2. Turn the Adjustable Leg to adjust the levelness.
 - When increasing height, turn Adjustable Leg towards (LOOSEN) direction.
 - When decreasing height, turn Adjustable Leg towards (TIGHTEN) direction.
3. Turn the Adjustable Leg knob towards (TIGHTEN) direction to tighten it.

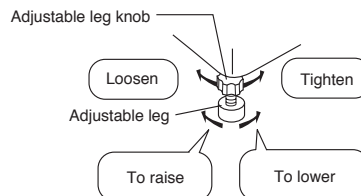


- 4 Check the machine for unsteadiness and tightens the adjustable leg knob.

16

Connect the water supply hose



That the appliance is to be connected to the water faucet using new water tap adaptor and water supply hose and that old one should not be reused.

1. Loosen the 4 screws on the water tap adaptor just enough to slip the adaptor over the mouth of the faucet.
2. Slip the water tap adaptor over the faucet, keeping it in a straight line with the faucet. Tighten the screws, applying even pressure all around. When the space behind washing machine is narrow due to a wall or other obstacle, adjust the back screw to the proper position before slipping the connector over the faucet.
3. Remove the tape and tighten B by turning it to the right.
4. With the water supply hose cover and lever pushed down, slide the hose up onto the proper position release them before hear it click into place.
5. Pull down on the hose to make sure it will not come off.
6. Turn on the water faucet to check for leaks.

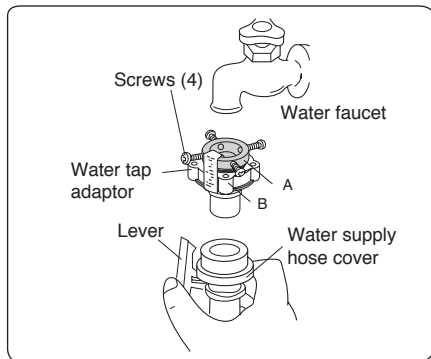


[Note]

- Firmly tighten part B of the water tap adaptor, otherwise water leakage will result.
- If a water tap adaptor is already connected, replace with the attached new one.
- When the hose must be reinstalled (after you remove, for example), turn B to the left until about 4 mm of the thread becomes visible, then carry out the procedure described above.

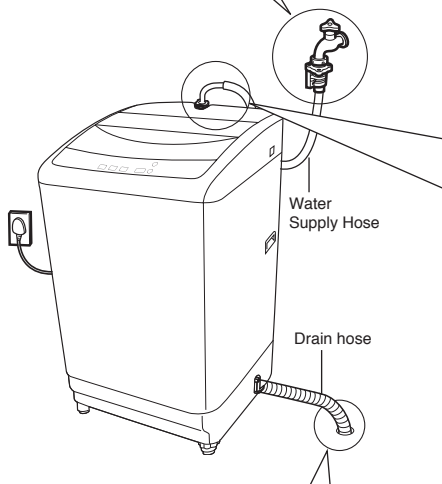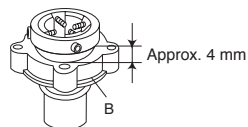

Connect the water supply hose to the water supply valve screw.

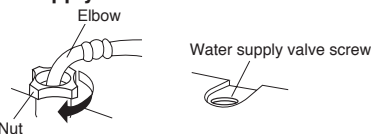


1. Push the water supply hose nut straight onto the water supply valve screw.
2. Hold the elbow by lifting it up, screw the nut onto the water supply valve screw, and firmly tighten the nut.
3. After the nut is tightened, check whether or not the elbow is unsteady or loose.
4. After tightening, open the faucet to confirm that there is no water leakage.

[Cautions]

- Firmly tighten the nut, otherwise water leakage will result.
- Water Pressure Rating : $2.9 \times 10^4 - 9.8 \times 10^5$ Pa

Hose extension

If extended external part is necessary when connecting the drain hose, the length of the drain hose should be less than 3 m and the height should be below 10 cm.

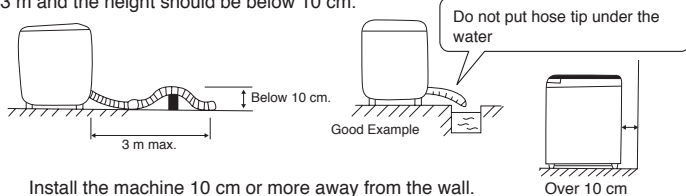


Install the machine 10 cm or more away from the wall.

Drain Hose Installation Instruction

(The drain hose is installed inside the bottom of the base.)


1. Lay down the washing machine with the back body facing to the upside.
2. Peel off the tape and pull out the drain hose from the base.

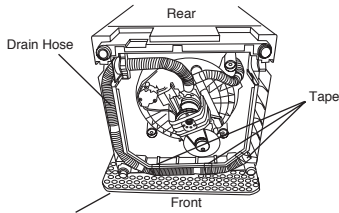


Spread a mat such as cardboard under the body to avoid scratches.

■ To change the drain hose to opposite.

1. Lay down the washing machine with the back body facing to the upside.
2. Remove the screw fixing the hose holder.

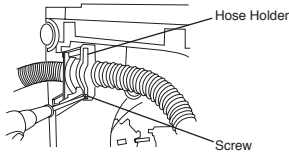

3. Remove the hose holder from the base.

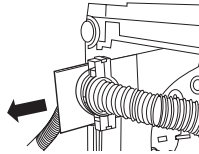


Caution

Make sure the hose holder is fixed on the base properly to avoid water leaking caused of the hose damaged.

Note


Make sure to remount the bottom cover after pulling out the drain hose or changing its position.

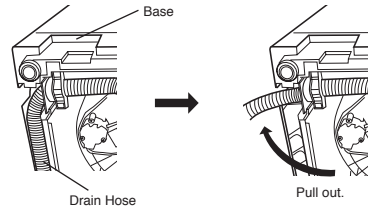


(Ex. Changing hose position from right to left.)

4. Move the hose holder to opposite side. Then insert the hose holder to left hose outlet position of the base.

For NA-F70B1

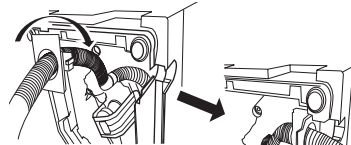


For NA-F62B1

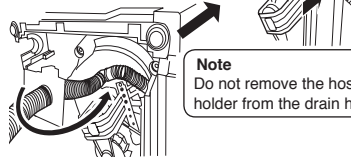

Note

Do not remove the hose holder from the drain hose.

 5. Fix the hose holder with screw properly.



Note

Make sure the drain hose is not twisted.



Bottom Cover Installation Instruction

A. Purpose

For safety precaution.

B. How to install Bottom Cover to the Base

1. Lay down the washing machine with the back body facing to the upside.
2. Adjust the Hose Hole Cover A (accessory) to the slot at the base.
3. Fix Bottom Cover (accessory) where surface with UP indication is facing to the washing machine. Then securely fasten the 9 screws of the Bottom Cover to the Base.

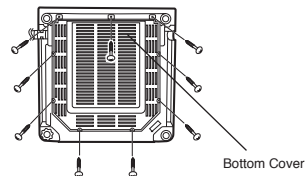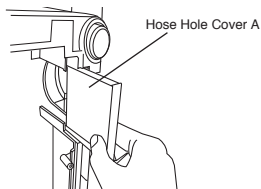








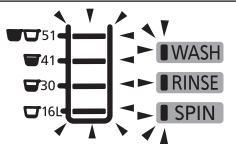
Troubleshooting

The following symptoms are not trouble.

Symptoms	Causes
Machine begins filling water in the middle of the wash.	<ul style="list-style-type: none"> When the laundry amount is large at the HIGH water level, the machine sometimes fills automatically. When level goes down, the machine fills automatically.
The water level is too high for the amount of laundry being washed.	<ul style="list-style-type: none"> When the laundry is already soaked with water before the wash is started, or if there is water in the tub before the wash is started, the water level will sometimes be higher.
The water level is too low for the amount of laundry being washed.	<ul style="list-style-type: none"> With light laundry made of synthetic or blended fabric, the water level will sometimes be lower.
Midway during spinning, the operation suddenly changes to rinsing.	<ul style="list-style-type: none"> When the laundry is unbalanced during spin, rinsing and automatic correction of unbalanced laundry will begin. Later spinning will return to normal condition.
Water does not flow through the lint filter. Double Cascade does not operate.	<ul style="list-style-type: none"> When the water level is set to very Low, water sometimes will not flow through the lint filter. Double Cascade does not operate when these settings have been selected.
The water is drained even filled by a bucket.	<ul style="list-style-type: none"> Do not leave more than 15 seconds while powered on. Fill the water while powered off or after pushing the start button.
During draining, the laundry and the spinner rotates with irregular movements.	<ul style="list-style-type: none"> To suppress detergent suds build-up, the washing tub turns slowly and quickly.
The buttons do not work.	<ul style="list-style-type: none"> Only the [WATER LEVEL] and [PROCESS] button is available after the machine begins washing. To change the setting, press the [POWER OFF] button and reconfigure the setting.
If you start with the rinse cycle, the tub is not filled with water.	<ul style="list-style-type: none"> When there is water in the tub, the operation starts with the draining.
Washing machine does not run at all.	<ul style="list-style-type: none"> Check if there is power failure. Check if the power fuse has blown out or the breaker is actuated. Check if the power plug is plugged in thoroughly. Check if the "power switch" has been pressed. Has the water faucet been turned on? Check if the [START/HOLD] button has been pressed. Has the machine been programmed under [RESERVE] timer?
Water is not supplied.	<ul style="list-style-type: none"> Check if the water faucet is turned on. Is the water supply cut off? Check if the connection of the water supply hose is clogged with dirt. Please refer to page 14 for cleaning water supply hose filter.
Washing operation still continue even though the expected finishing time had passed on Reserve Program.	Washing time will be longer because of laundry unbalance, water feeding and draining condition.
Buzzer sounds followed by a draining when opening the lid during wash and rinse.	In the case when open the lid after setting the [CHILD LOCK] mode, it will force the draining process. Pull out power plug from the outlet and replug it after 5 seconds.
Buzzer sounds when opening the lid during cascade rinsing or spinning.	This is a reminder for a user not to put a hand and/or any object into the tub. It is not out of order. * To turn off the buzzer, close the lid.
Tub shaking with the sound of water.	This is the sound of the liquid to maintain the balance during spinning.
Water supply failure.	Normally after the water supply failure, the water will become muddy. Detach the water feeding hose and turn on the water faucet to release to due muddy water. Fix water hose and start washing.
Power failure.	In this case, [POWER ON] and [START/HOLD] buttons need to be pressed again after electricity is restored. Then the machine will resume operation automatically from beginning of the stopped process.

Error Indication

Error Indication Table – when the following indications occur the buzzer will sound.

	 	<ul style="list-style-type: none"> ■ Check if abnormalities listed below are seen in the external water hose. <ul style="list-style-type: none"> • Is the hose connected? • Is it clogged with lint? • Is it crushed? • Is the tip soaked in water? • Is a small pipe used? • Is a part of hose at a height of over 10 cm midway? • Is the extension hose longer than 3 m? • Is the hose lay down? 	After open and close of the lid operation will restart.
		<ul style="list-style-type: none"> • Check if the lid is opened. → Close the lid. 	
		<ul style="list-style-type: none"> • Is the laundry unbalanced? → Even it out. • The machine is rattling. Is it inclined toward the floor? • Is the adjustable knob loose? (Adjust the machine so it does not jiggle, then tighten the adjustable knob. See page 16.) 	
		<ul style="list-style-type: none"> • Check if you have forgotten to connect the water hose and to turn on the faucet. • Check if the connection of the water supply hose is clogged with dirt. • Please refer to "Maintenance" (Water supply hose filter) on page 14. • Check if the water supply failure. 	
		<ul style="list-style-type: none"> • Check if the lid open more than 10 seconds after start of water feeding. [CHILD LOCK] mode will activate to force drain the water. Unplug the power cord from the outlet and replug it again after 5 seconds. • Please refer to "[CHILD LOCK] program" on page 12. 	
	<ul style="list-style-type: none"> • The buzzer does not sound. • Unplug the power cord and request for service. 		

Specification

Model	NA-F70B1	NA-F62B1
Voltage	220 - 240 V ~	220 - 240 V ~
	50 Hz	50 Hz
Power consumption	420 W	420 W
Standard water amount	51 L	45 L
Maximum capacity	7.0 kg	6.2 kg
Length of power cord	(Approx. 1.6 m)	
W x L x H	583 x 572 x 950 (mm)	
Net weight	30 kg	29 kg

Matsushita Electric Industrial Co., Ltd.

<http://www.panasonic.co.jp/global/>

© 2008 Matsushita Electric Industrial Co., Ltd. All Rights Reserved.