


إرشادات الأستعمال Operating Instructions

NI-313E/313EW/313EWT

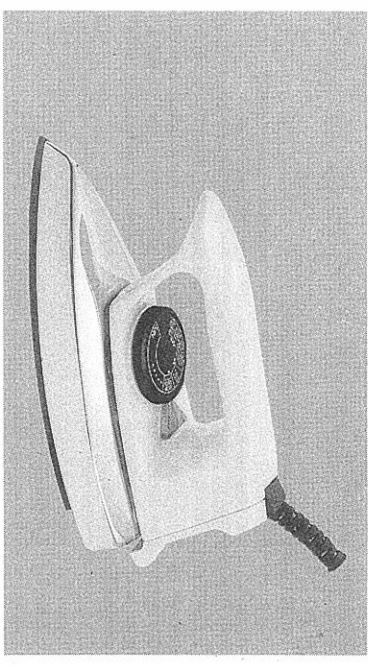

Before operating this iron, please read these instructions completely.
يرجى قراءة الإرشادات بصورة وافية قبل الشروع في تشغيل هذه المكواة.

SPECIFICATIONS

Rated Input	1,000W
Rated Voltage	220V ~
Country of Origin	Malaysia

المواصفات الهندسية	
السلط اللقير	١٠٠٠ واط
الجهد المقدر	٢٢٠ فولت ~
بلد المصدر	ماليزيا

Selector Level Setting ضبط فواخ المنتخبة	Soleplate Temperature °C درجة حرارة لوحة القاعدمة °C
1	Approximately 85 حوالي
2	Approximately 112 حوالي
3	Approximately 140 حوالي
4	Approximately 165 حوالي
5	Approximately 185 حوالي
6	Approximately 200 حوالي


Matsushita Electric Industrial Co., Ltd.

Website: <http://panasonic.co.jp/appliance/global/products>

Printed in Malaysia
طبع في ماليزيا

H0306N0
i8200G-01NO2A

PARTS IDENTIFICATION

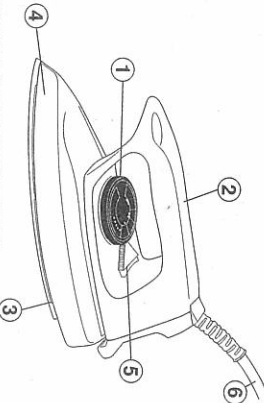

IMPORTANT SAFETY PRECAUTIONS

- When leaving the room even for a short time, disconnect the power plug. Keep children away.
- Do not leave the iron unattended while it is connected to the mains.
- Don't use the iron with the cord in tangled condition. The supply cord might be damaged soon.
- If the supply cord is damaged, it must be replaced by our service agent or a similarly qualified person in order to avoid hazards.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

HOW TO USE

- Set fabric dial at the desired fabric marking.
- Make sure the voltage indicated on the iron meets your local voltage. Allow the iron to heat up for 2 minutes on heat rest before ironing.
- The pilot lamp glows when the iron is switched on, and goes off when the iron is heated up to the temperature selected by the fabric dial. The pilot lamp will remain off as long as the iron keeps to the selected temperature and when the temperature decreases, the thermostat will start working, and the lamp will glow again. The thermostat makes the pilot lamp adjust automatically to the varying temperature as being selected by the fabric guide.
- First, iron chemical synthetic fabric at low temperature, and then as the temperature rises, iron wool, cotton and linen accordingly. The iron heat up more quickly than it cools.
- Conversely, wait awhile when changing to a cooler setting.

إرشادات الأستعمال، تمييز الأقسام

1	ديال الأقمشة	Fabric dial
2	ملزمة	Handle
3	لوحة النعال	Soleplate
4	القاعدة الغلافية	Cover shell
5	مصباح دلالي	Pilot lamp
6	كبل	Cord

احتياطات هامة لسلامة

- عند مغادرة الغرفة حتى ولو لفترة قصيرة، فصل قابس المكواة واطنحها بعيداً عن أيدي الأطفال.
- يجب عدم ترك المكواة ممتصة بالأسمر الرئيسي للتزود بالطاقة الكهربائية عندما لا تكون في الغرفة.
- إذا تعطل الكبل اللقير، يجب أستبداله بواسطة وكيل صيانة معتمد من قبلنا أو فني صيانة مؤهل لكي تتجنب وقوع أي حوادث خطيرة.

٤- احرص على عدم استخدام المكواة عندما يكون سلكها متشابك، قد يتلف السلك اللقير بسرعة.

٥- استخدم ووضع المكواة يجب أن يكون على سطح ثابت

- ١- تأكد من أن حامل المكواة مبروح على سطح ثابت قبل وضع المكواة عليه
- ٢- يجب أن لا تستخدم المكواة إذا تضرمت اللقير أو تمت ملاحظة علامات
- ٣- خلال بصورة واضحة أو تمت ملاحظة وجود تشريب

كيفية الأستعمال

- ١- أتبسط ديال الأقمشة على العلامة الخاصة بالقماش المطلوب كيه
- ٢- تحقق من توافق الجهد اللين على المكواة مع الجهد اللقي. ضح المكواة على كبح الأستناد ودعها تسخن لمدة دقائق قبل البدء في عملية الكي.
- ٣- عند توصيل المكواة (أي فتح القفل) سيقوم المصباح الليلي ويطنح عندما تسخن المكواة الى درجة الحرارة المنتجة بواسطة ديال الأقمشة. سيستمر المصباح الليلي ويطنح في مثل هذه الحالة ما لم تنخفض درجة حرارة المكواة دون الدرجة المطلوبة. بمجرد أن تستمر الأقمشة، سيقوم المصباح الليلي بفتح الأقمشة مرة ثانية، يقيم الترموستات بالسيطرة على التسخين ويطنح المصباح الليلي بصورة تلقائية وفق الأنتقاء اللين في ديال الأقمشة.
- ٤- في البداية - لكي الأقمشة الأستعمالية في درجة حرارة منخفضة، ومع ارتفاع درجة الحرارة لكي الأقمشة اللين والكتانيات، تنقل المكواة عند التسخين وقت اللقير ما تنقله كي تبرد.
- ٥- عند الأنتقال من درجة حرارة منخفضة الى درجة حرارة عالية، دع المكواة تسخن الى الدرجة المطلوبة والعكس بالعكس.